



Canon Powershot SD880 Front Cover Removal Replacement

Written By: Robert Manno






TOOLS:

- [Phillips #00 Screwdriver](#) (1)
-

Step 1 — Back Cover Removal

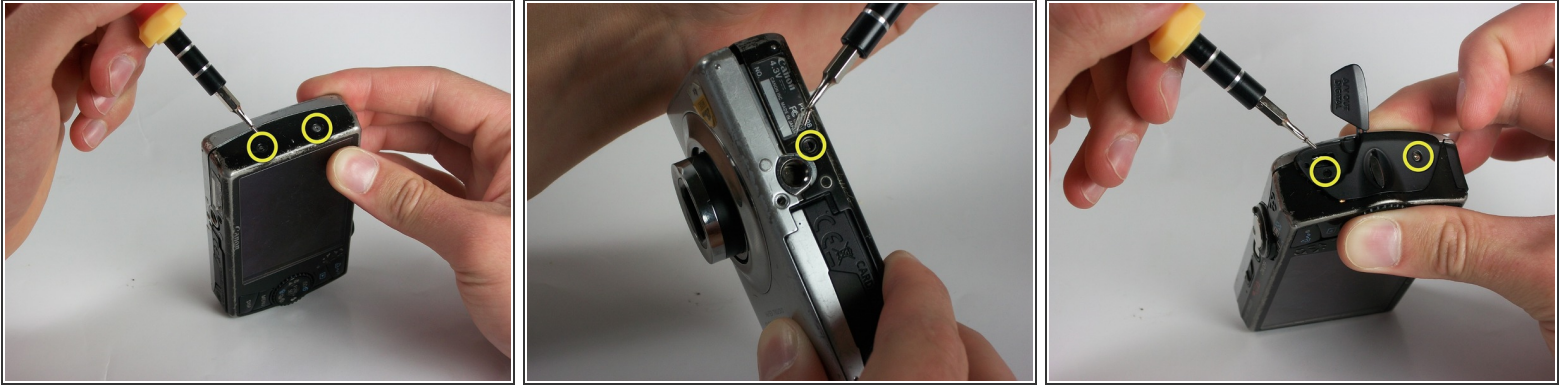

- Remove the 2 screws(2.41mm long) on the side of the camera next to the LCD screen.
- Remove the 2 screws(4.08mm) on the other side. One is located under the rubber USB flap.
- Remove the last screw(2.59mm) located on the bottom of the camera.
- Slowly pull the back cover of the camera.

Step 2 — Front Cover Removal



- Remove the screw(2.59mm) from the bottom of the camera.
- Remove the screw(4.08mm) from the menu button side of the camera.
- The 2 screws on the other side of the camera were already removed when taking off the back cover.

To reassemble your device, follow these instructions in reverse order.

